

AD-A163 015

2

NRL Memorandum Report 5702

## A Gated Microchannel Plate Image Intensifier Packaged in a Reflex Camera Back

S. HAUVER, R. E. PECHACEK, J. R. GREIG,  
D. P. MURPHY AND M. RALEIGH

*Experimental Plasma Physics Branch  
Plasma Physics Division*

December 19, 1985

This research was supported by the Defense Advanced Research Projects Agency and monitored by the Naval Surface Weapons Center under Contract #N60921-85-WR-W0240.



DTIC  
ELECTE  
JAN 07 1986  
S D E

NAVAL RESEARCH LABORATORY  
Washington, D.C.

Approved for public release; distribution unlimited.

DTIC FILE COPY

26 1 2 000

SECURITY CLASSIFICATION OF THIS PAGE

AD-A163 015

## REPORT DOCUMENTATION PAGE

1a. REPORT SECURITY CLASSIFICATION UNCLASSIFIED			1b. RESTRICTIVE MARKINGS		
2a. SECURITY CLASSIFICATION AUTHORITY			3. DISTRIBUTION/AVAILABILITY OF REPORT Approved for public release; distribution unlimited.		
2b. DECLASSIFICATION/DOWNGRADING SCHEDULE					
4. PERFORMING ORGANIZATION REPORT NUMBER(S) NRL Memorandum Report 5702			5. MONITORING ORGANIZATION REPORT NUMBER(S)		
6a. NAME OF PERFORMING ORGANIZATION Naval Research Laboratory		6b. OFFICE SYMBOL (if applicable) Code 4760		7a. NAME OF MONITORING ORGANIZATION Naval Surface Weapons Center	
6c. ADDRESS (City, State, and ZIP Code) Washington, DC 20375-5000			7b. ADDRESS (City, State, and ZIP Code) White Oak, Silver Spring, MD 20910		
8a. NAME OF FUNDING/SPONSORING ORGANIZATION DARPA		8b. OFFICE SYMBOL (if applicable)		9. PROCUREMENT INSTRUMENT IDENTIFICATION NUMBER	
8c. ADDRESS (City, State, and ZIP Code) Arlington, VA 22209			10. SOURCE OF FUNDING NUMBERS PROGRAM ELEMENT NO. 62707E PROJECT NO. TASK NO. WORK UNIT ACCESSION NO. DN180-127		
11. TITLE (Include Security Classification) A Gated Microchannel Plate Image Intensifier Packaged in a Reflex Camera Back					
12. PERSONAL AUTHOR(S) Hauver, S., Pechacek, R.E., Greig, J.R., Murphy, D.P. and Raleigh, M.					
13a. TYPE OF REPORT Interim		13b. TIME COVERED FROM TO		14. DATE OF REPORT (Year, Month, Day) 1985 December 19	
15. PAGE COUNT 20					
16. SUPPLEMENTARY NOTATION This research was supported by the Defense Advanced Research Projects Agency and monitored by the Naval Surface Weapons Center under Contract N60921-85-WR-W0240.					
17. COSATI CODES FIELD GROUP SUB-GROUP			18. SUBJECT TERMS (Continue on reverse if necessary and identify by block number) Framing camera, Image intensifier		
19. ABSTRACT (Continue on reverse if necessary and identify by block number) We describe a fast (exposures down to ~10 ns) electrically triggered camera back/shutter designed for use with the Hasselblad 500C still camera. This camera back contains a microchannel plate image intensifier which can be gated and provides a gain of approximately X1000. It reads out on to Polaroid film through a fiber optic face plate. The gated camera back is interchangeable with the regular Polaroid back (or any other) for the Hasselblad 500C and maintains the "through the lens" focusing.					
20. DISTRIBUTION/AVAILABILITY OF ABSTRACT <input checked="" type="checkbox"/> UNCLASSIFIED/UNLIMITED <input type="checkbox"/> SAME AS RPT. <input type="checkbox"/> DTIC USERS			21. ABSTRACT SECURITY CLASSIFICATION UNCLASSIFIED		
22a. NAME OF RESPONSIBLE INDIVIDUAL R. E. Pechacek			22b. TELEPHONE (Include Area Code) (202) 767-2077		22c. OFFICE SYMBOL Code 4763

DD FORM 1473, 84 MAR

83 APR edition may be used until exhausted  
All other editions are obsolete.

SECURITY CLASSIFICATION OF THIS PAGE

## CONTENTS

I. INTRODUCTION .....	1
II. DESCRIPTION OF CAMERA .....	2
a) Mechanical Detail .....	2
b) Electrical Detail .....	3
III. EXAMPLE OF RESULTS .....	4
IV. CONCLUSIONS .....	5
V. ACKNOWLEDGMENT .....	5
VI. REFERENCES .....	16

Accession For	
NTIS GRA&I	<input checked="" type="checkbox"/>
DTIC TAB	<input type="checkbox"/>
Unannounced	<input type="checkbox"/>
Justification	
By _____	
Distribution/	
Availability Codes	
Dist	Avail and/or Special
<b>A1</b>	



## A GATED MICROCHANNEL PLATE IMAGE INTENSIFIER PACKAGED IN A REFLEX CAMERA BACK

### I. INTRODUCTION

One of the missions of our Experimental Plasma Physics group is to study the interaction of charged particle beams with reduced density channels in atmospheric pressure air. Reduced density channels are produced by lasers or electrical discharges, which emit orders of magnitude more light than is emitted by a channel-electron beam interaction. In order to photograph the interaction it is necessary that the camera shutter be closed during the channel producing discharge and open a few microseconds later for the passage of the electron beam pulse. It was for this reason that this gated image intensifier package was designed.

The proximity focussed microchannel plate intensifier tube (ITT F-4111) used in this package is a continuous operation amplifier of a type used in night vision devices. The first reported use of a channel plate tube as a fast shutter was by Albert J. Lieber in 1972,<sup>1</sup> who achieved a shuttering time of four nanoseconds. N.P.S. King, et al.,<sup>2</sup> reported shuttering times of one nanosecond for the F-4111. The device described in this present paper uses an electrical configuration very close to the one described by these later authors.

The contribution of the present work is one of convenience and versatility. The image intensifier package is mounted, interchangeably, on the back of a reflex camera with its photocathode located at the camera's focal plane and a pack of Polaroid film pressed against its fiber-optic output plate (Figure 1). A scene to be photographed through the image intensifier is focussed through the reflex optics of the camera. No continuous operation

'focus' mode is necessary for the image intensifier. Further, by replacing the image intensifier package with a regular polaroid film back, the scene can be photographed directly for alignment or reference purposes. Lastly, this image intensifier system has the advantage of a complete camera system: a variety of commercially available accessories and a large variety of lenses each with its own mechanical shutter and iris.

## II. DESCRIPTION OF CAMERA

### a) Mechanical Detail

The image intensifier package consists of three parts: a metal adapter plate that mates with a Hasselblad 500/C, an aluminum housing that contains the intensifier tube, and a standard plastic Polaroid film pack holder. The adapter plate and the film pack holder make up a standard 500/C Polaroid back. In its operating position, the image tube photocathode is located at the image plane of the camera lens, the output fiber-optic plate is pushing gently against the Polaroid film, and the film pull-tabs are covered by a lever. Pulling the lever to expose the pull-tabs also moves the intensifier tube away from the film, allowing the film to be pulled without wiping on the fiber-optic plate. The only alterations of standard parts necessary for assembly of the package are removal of a glass plate from the metal adapter plate and trimming about one millimeter of the silicone potting compound from the photocathode end of the intensifier tube.

Figure 2 is an assembly drawing of the image intensifier housing. Figure 2a is a view of the side that faces the Hasselblad camera. The coverplate for this side is the metal adapter plate for a Hasselblad supplied Polaroid film camera back. All of the mechanical mating mechanisms are thus between Hasselblad parts. In the operating position, the photocathode of the

intensifier tube, including a .135 inch thick silica window, is at the focal plane of the lens.

Figure 2b is a view of the other side of the housing. This side faces a pack of Polaroid film and, in the operating position, the fiberoptic faceplate of the intensifier tube touches the film. The mechanical complexity of the device is due to the necessity of removing the fiberoptic faceplate from the Polaroid film when the film is being pulled. The intensifier and holder are moved away from the film by raising the thumb lever from its normal vertical position to a horizontal position. This motion not only moves the intensifier but it also uncovers the film tabs so that they may be pulled. The thumb lever is linked to the cam as shown in Figure 2b, and lifting the thumb lever moves the cam to the right. It is not evident from the assembly drawings, but the cam can only move left and right, and the intensifier holder can only move into and out of the plane of the drawing. Two pairs of diagonal slots are milled into the cam, and as it moves right and left, the cam following rods must slide in and out. The range of motion of the intensifier is about 0.030 inches.

#### b) Electrical Detail

Figure 3 is an electrical schematic diagram for the ITT F-4111 proximity focused channel plate intensifier tube. The device requires three voltages plus ground. In the circuit of this system, the input side of the of the microchannel plate is chosen as ground. A positive dc voltage is applied to the photocathode to keep the tube off unless it is pulsed. The output side of the microchannel plate is biased to about 700 volts, providing a nominal gain of 10,000. The P-20 phosphor, aluminized anode is biased 5000 volts above the

microchannel plate output side. To turn the tube on, the cathode is pulsed with a negative voltage large enough to overcome the positive bias and accelerate photo-electrons into the microchannel plate. The bias voltages are supplied by a battery operated power supply manufactured by K-M Electronics, a company that specializes in image intensifying tube power supplies. The power supply is equipped with safety features to prevent the tube from being damaged by too intense a light input and too high a microchannel plate bias voltage.

The negative gate pulse to the photocathode is a 50 ohm signal between 80 and 120 volts. There are two coaxial connectors leading to the photocathode. One is used as the input connector and the other is to be terminated. It is useful to use as a termination a line back to an oscilloscope input. In this way, for fast pulse operation, the pulse degradation can be monitored.

Appendix I contains manufacturers' data sheets on the intensifying tube and the battery operated power supply.

### III. EXAMPLE OF RESULTS

The net optical gain of the system is about 1000. This number is determined by comparing film exposure generated directly on the film by an open shutter photograph of an electrical discharge of known duration through a set of neutral density filters, with the film exposure of the same scene through the intensifier pulsed for several nanoseconds. The same camera and lens are used in both exposures. A regular polaroid film pack back is used for the first exposure, and the intensifier back for the second. The neutral density filters are adjusted to obtain equal exposures and the gain is computed by equating the products of light gain times exposure time for the

two equal exposures. This gain is about a factor of ten lower than the quoted light gain, which is a cw gain.

Figure 4 is a 100 ns exposure of an interferogram of a reduced density channel generated by a pulsed  $\text{CO}_2$  laser beam in one atmosphere of nitrogen that has been seeded with  $\text{SF}_6$ . The interferometer is back lighted by a 0.5 mw cw HeNe laser. The off-on contrast ratio of the intensifier is such that the laser may impinge on the ungated cathode for as long as thirty seconds before the film is fogged. The two burn spots in the photograph are the result of trying to increase the pulse current capability of the channel plate electron multiplier and the phosphor anode in an effort to bring the pulse gain up to the value of the quoted cw gain.

#### IV. CONCLUSIONS


This report describes a single frame, fast (of the order of ten nanoseconds exposure time) exposure camera system with a light amplification factor of 1000. The system uses a commercially available proximity focused micro-channel plate intensifier tube and the Hasselblad 500/C still camera system. The cost of the single frame system, including a modest lens, camera body, two Polaroid backs, intensifier tube, battery operated power supply, and machine work is about \$13,000.

#### V. ACKNOWLEDGMENT

The authors are grateful to George Yates of Los Alamos National Laboratory for discussions and information on the design of fast pulse generators.

This work was supported by the Defense Advanced Research Project Agency and monitored by the Naval Surface Weapons Center.



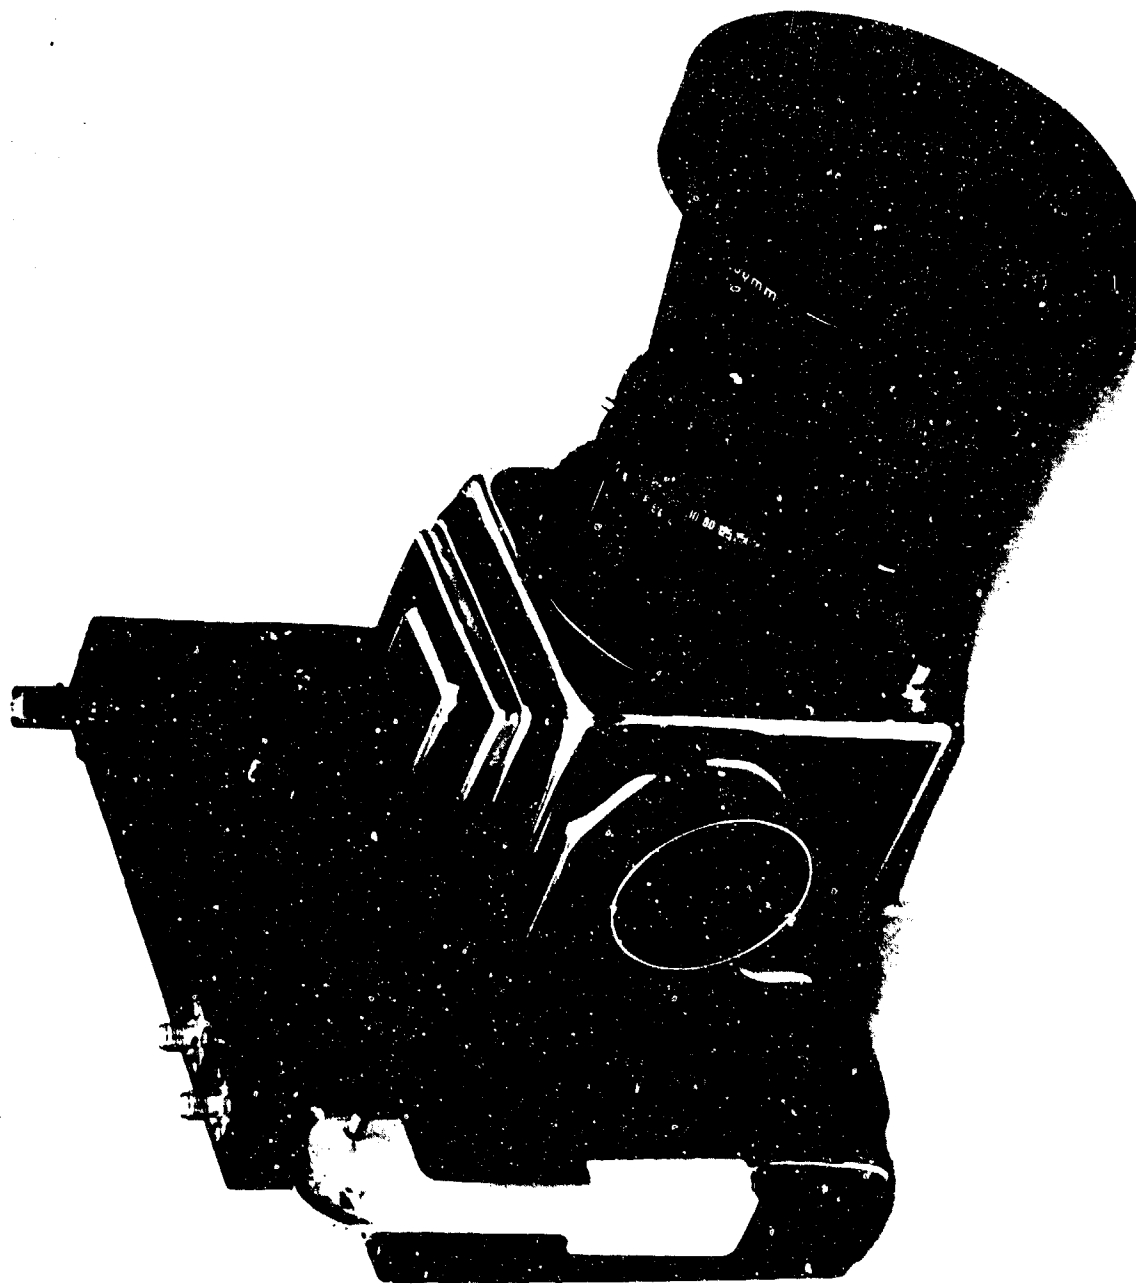

80927(4)

Fig. 1a — Photograph of the single fast frame intensifier system.

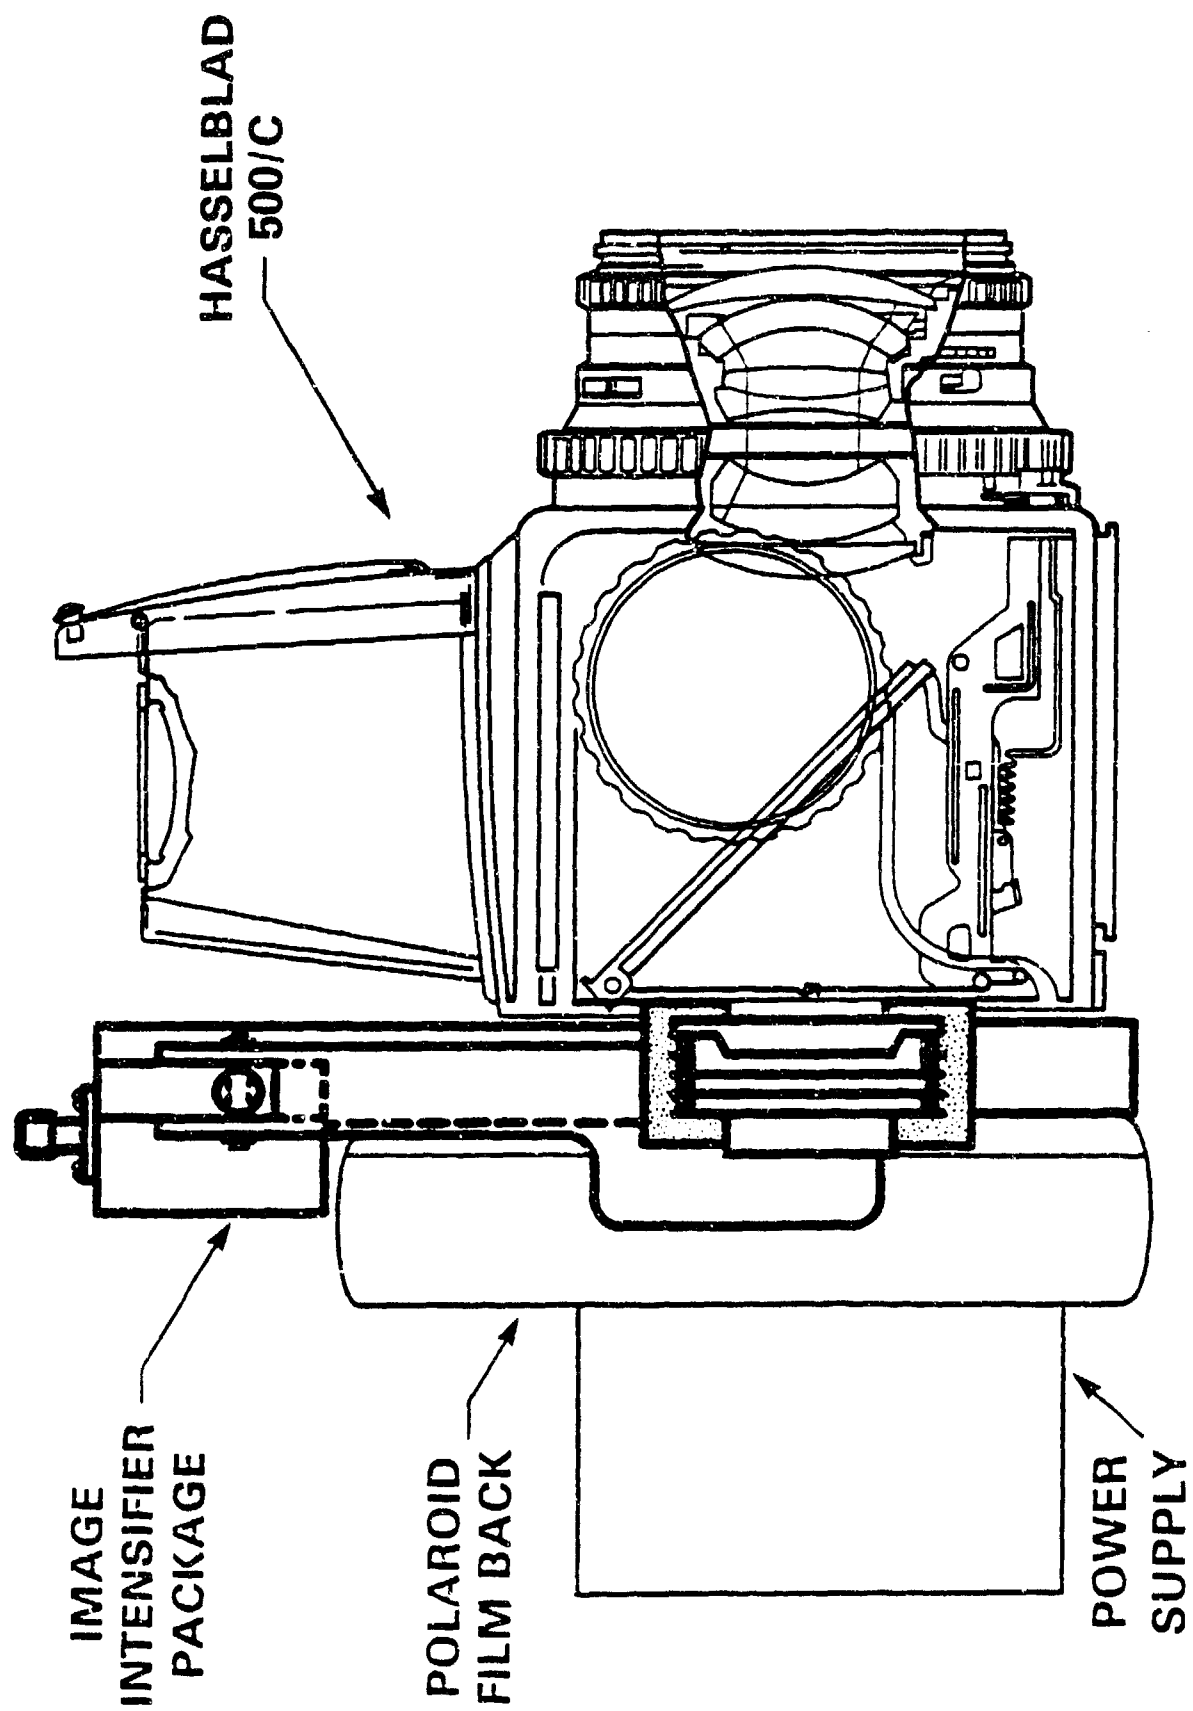


Fig. 1b — Scaled drawing of the single fast frame intensifier system.

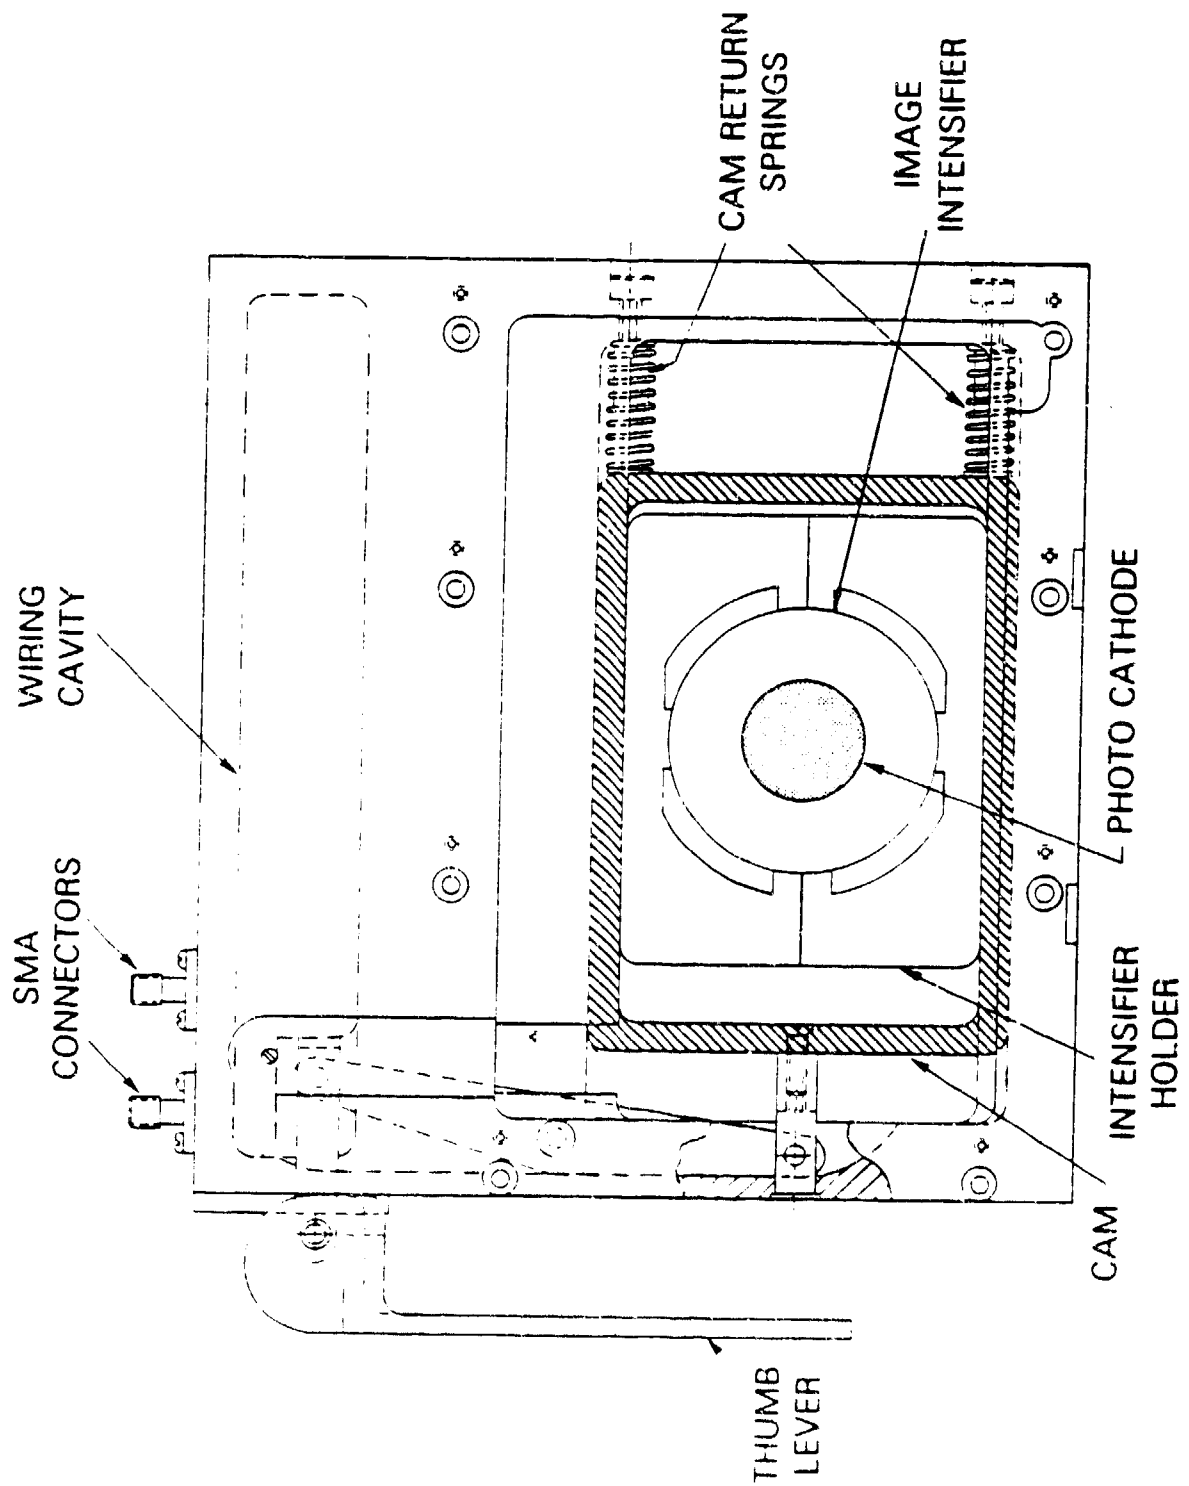


Fig 2a — Assembly drawing of the intensifier tube housing and transport mechanism viewed from the camera lens side

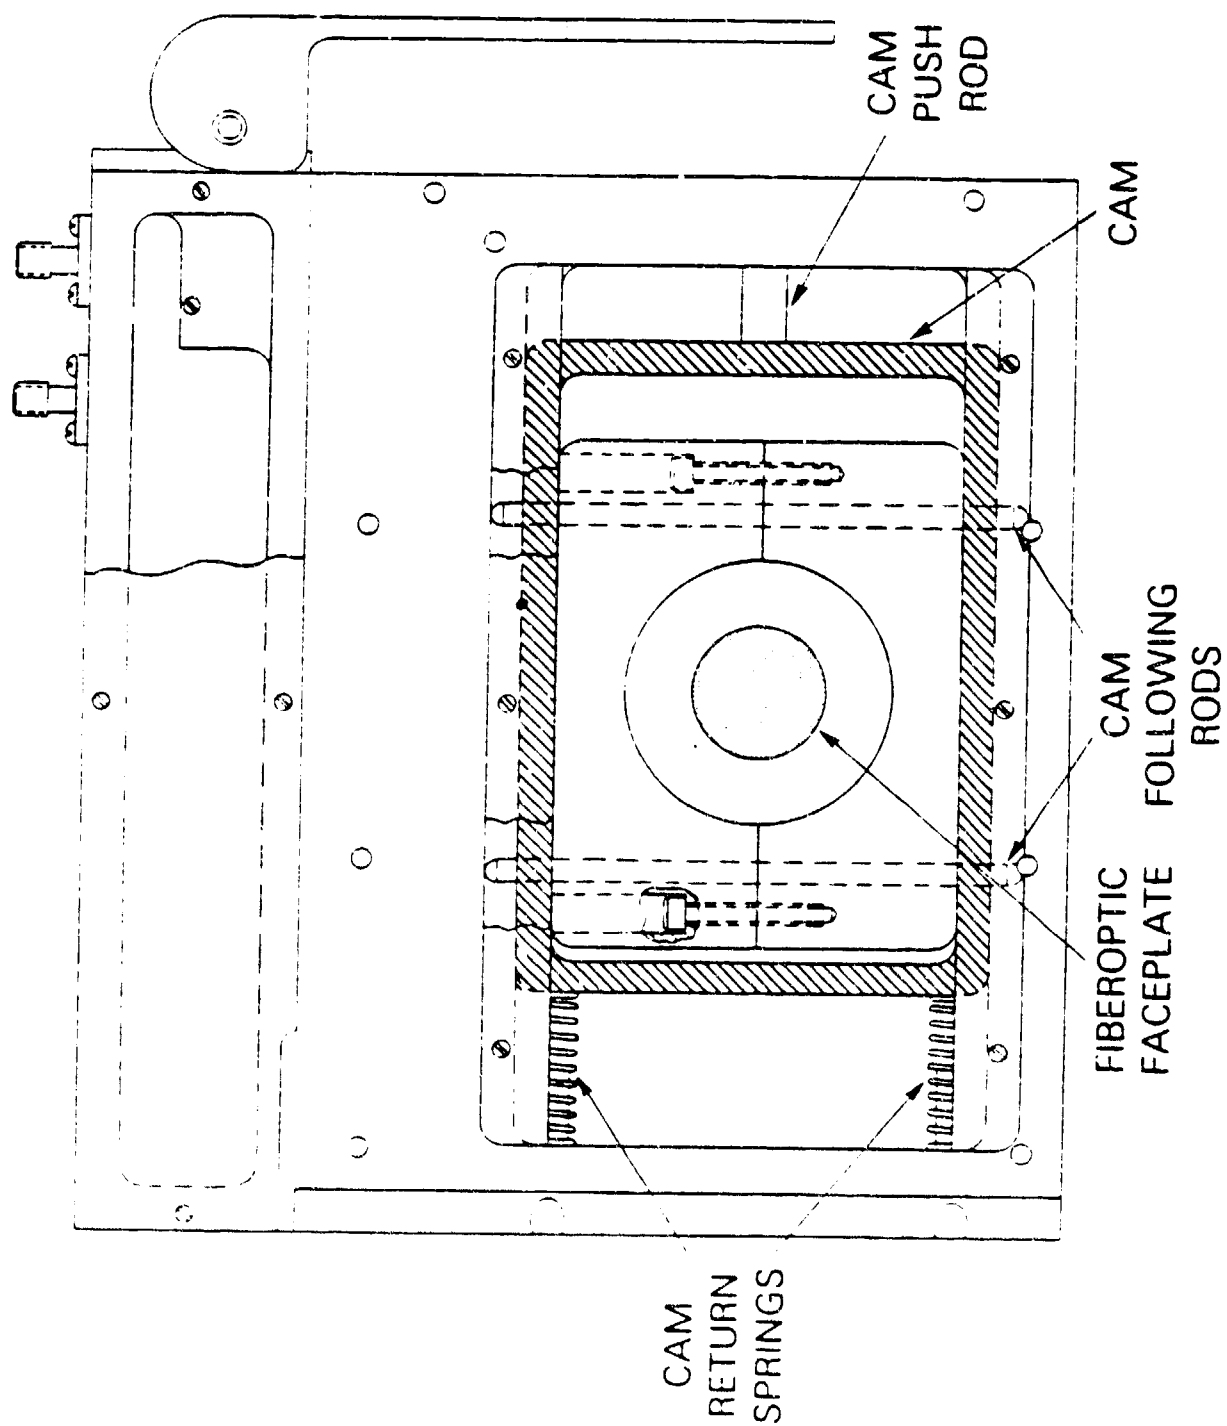


Fig. 2b — Assembly drawing of the intensifier tube housing and transport mechanism viewed from the film side

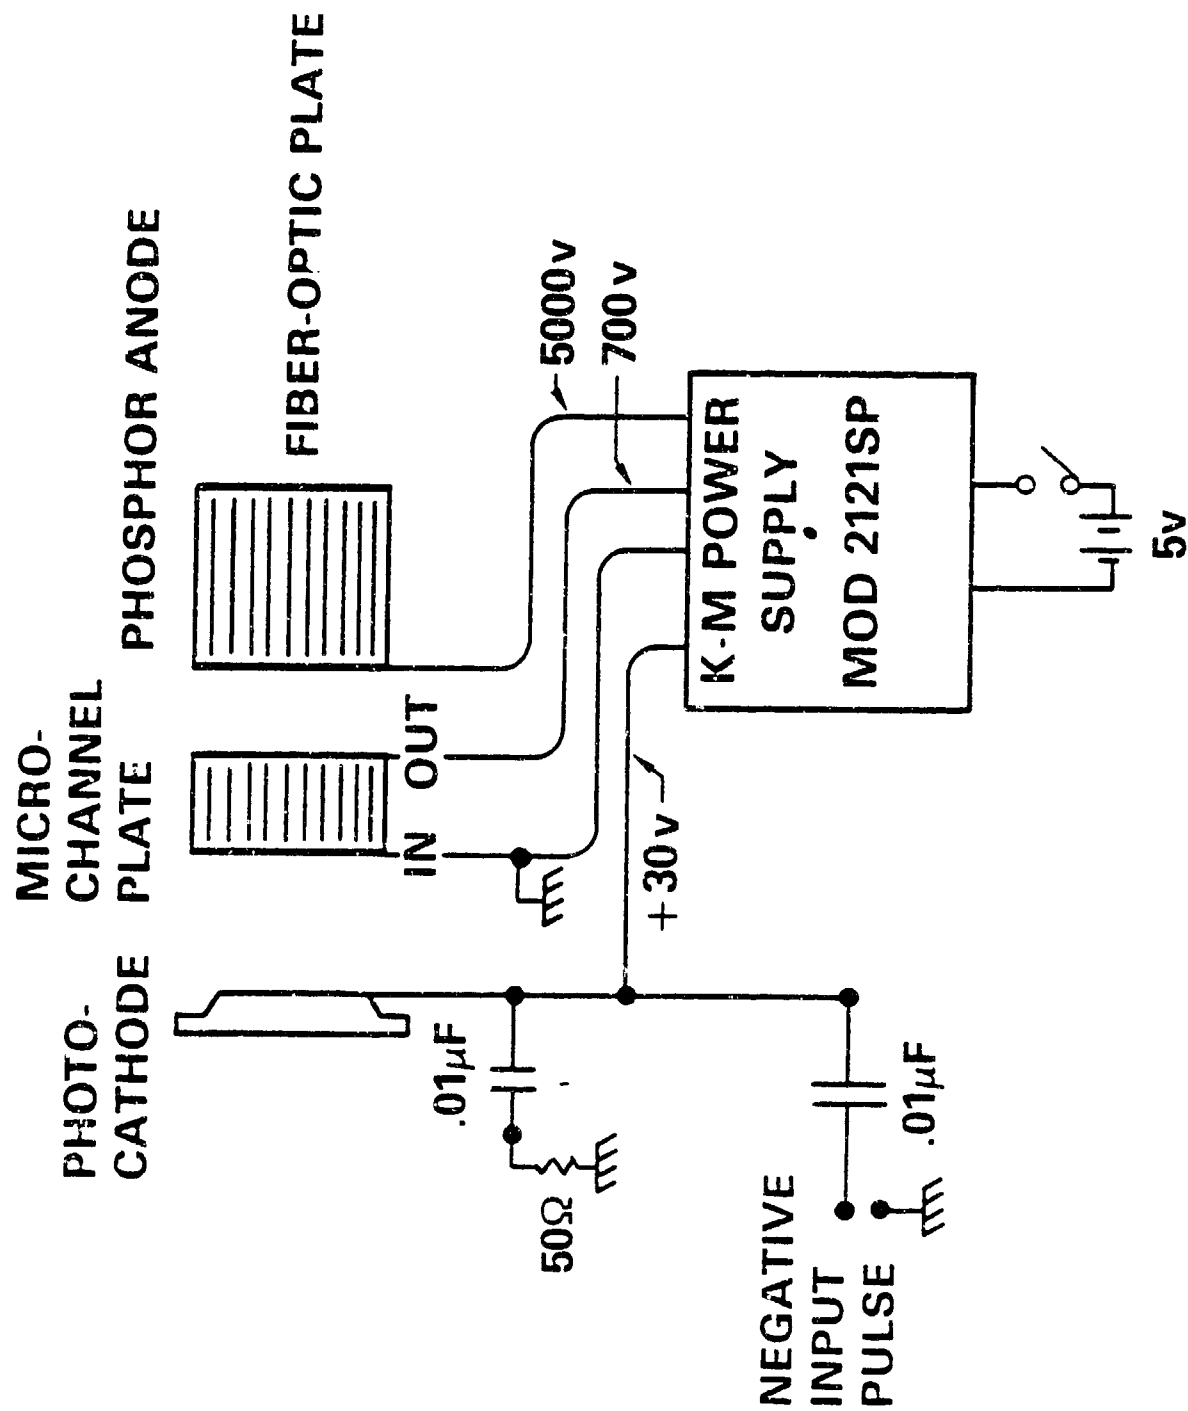


Fig. 3 — Electrical schematic diagram of the intensifier tube circuit.



Fig. 4 — Photograph of an interferogram taken at a 100 nanosecond exposure with the single fast frame intensifier system.

NOTE 1 Other photocathodes available on special order, include the S-1, to provide detection and conversion of  $1.06 \mu$  signals, and CsTe, CsI cathodes for special UV applications.

NOTE 2 Fiber optics, quartz, MgF<sub>2</sub>, or other materials available on special order.

NOTE 3 Other phosphors available on special order.





NOTE 4 Power Supplies can be an integral part of the tube assembly. Gateable and DC power supplies are available as separate units.

NOTE 5 Defined as the ratio of the total luminous flux from the phosphor screen to the total luminous flux incident on the photocathode from a standard 2,854° K tungsten lamp, and measured with a photometer as ft-l/ft-c with an input level of  $1 \times 10^{-5}$  ft-c incident on the photocathode. The ITT proximity focused channel intensifier tube provides a variable tube gain by varying the microchannel plate voltage.

NOTE 6 There is no degradation of resolution from center-to-edge of screen. Resolution is measured with  $5 \times 10^{-4}$  footcandles on the photocathode to determine limiting, or 5 per cent MTF levels with a 100 per cent contrast target.


NOTE 7 For continuous operation; this value may be several orders of magnitude higher for pulsed operation.

SPECTRAL OUTPUT  
P-20 PHOSPHOR

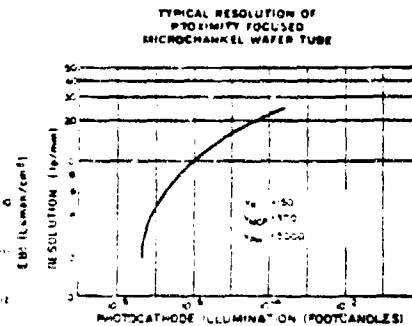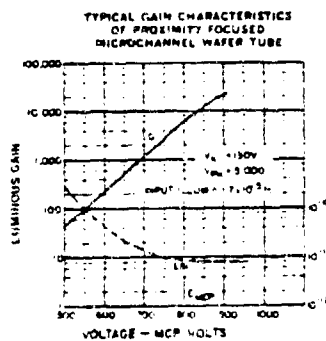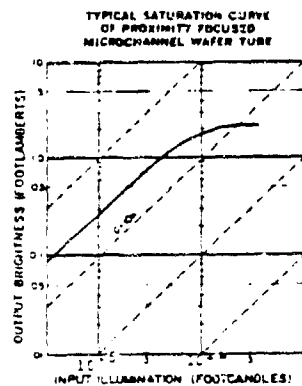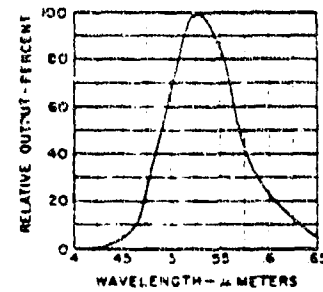


ELECTRO-OPTICAL PRODUCTS DIVISION **ITT**

F-4111, F-4112, F-4113

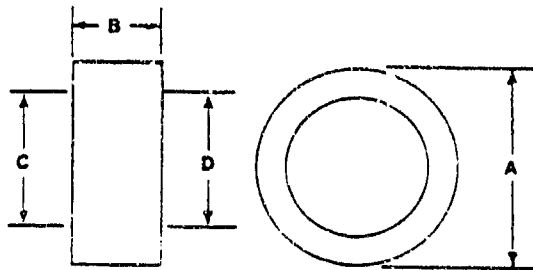

TYPICAL ABSOLUTE  
SPECTRAL RESPONSE CHARACTERISTICS

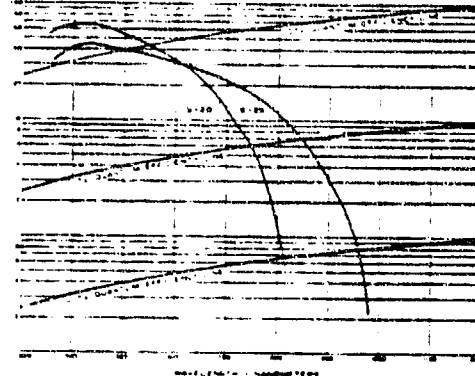

Dimensional Data		18mm F-4111	25mm F-4112	40mm F-4113	Units
A	Maximum diameter (with potting)	45	53	71	mm
B	Length (nominal)	21	21	24	mm
C	Useable Photocathode Aperture	18	25	40	mm
D	Useable Screen Aperture	18	25	40	mm
	Potted Weight	60	105	215	grams

ELECTRO-OPTICAL PRODUCTS DIVISION **ITT**  
3700 E. Pontiac St., Fort Wayne, Ind. 46803







electronics-inc

123 Interstate drive • West Springfield • Massachusetts • 01089 (413) 781-1250

## COMPACT IMAGE INTENSIFIER TUBE GATEABLE POWER SUPPLY

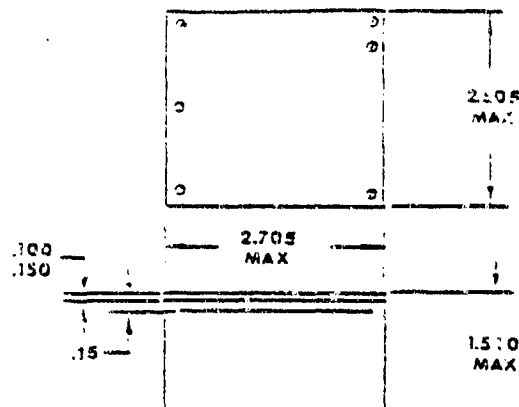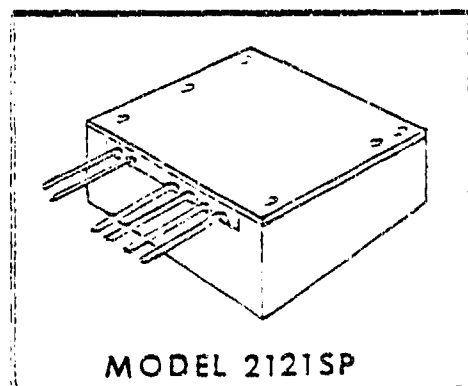

Dimensions are in Inches

### FEATURES

- Compact Size
- Voltage Control or Pot Control MCP (Specify when ordering)
- Adjustable ABC Shutdown
- Grounded MCP-In

### SPECIFICATIONS

PARAMETER	NAME	UNITS	MIN	NOM	MAX	REMARKS
Input Voltage	B+	+VDC	4.5	5.0	5.5	--
Input Current	I <sub>in</sub>	mA <sub>dc</sub>	-	125	200	--
Cathode Off	+V <sub>1</sub>	+VDC	25	30	35	Ref to MCP-In
MCP-In	(Gnd)	VDC	-	0	-	At B- Potential
MCP-Out	V <sub>2</sub>	+VDC	700	-	800	Ref to MCP-In
Anode	V <sub>3</sub>	+VDC	4500	5000	5500	Ref to MCP-Out
Cathode Load	CL <sub>1</sub>	pf	-	-	100	18 mm Tube K
MCP-Out Load	RL <sub>2</sub>	MΩ	50	-	-	--
Anode Load	RL <sub>3</sub>	GΩ	-	-	-	Limited by ABC
Anode Sense	ABC	nA	-	40	-	--

Temperature: Laboratory Environment (Room)

### NOTES:

1. ABC shutdown adjustable with internal potentiometer.
2. On voltage control MCP models, the MCP output voltage is adjusted via a 0 to +10 Vdc applied to V<sub>c</sub> line, where +10 Vdc is maximum MCP voltage. In addition, the maximum MCP voltage at -10 Vdc can be set via an internal MCP max limit pot.
3. On pot control MCP models, the MCP output voltage is adjusted via an internal potentiometer, where clockwise rotation increases the MCP voltage. In addition, the maximum MCP voltage attainable with the MCP adjust pot can be set via an internal MCP max limit pot.

5/5/84

## VI. REFERENCES

1. Albert J. Lieber, Rev. Sci. Instr., Vol. 43, p. 104 (1972).
2. N.P.S. King, G.J. Yates, S.A. Jaramillo, J.W. Ogle, J.L. Detch, Jr., Los Alamos National Laboratory Report LA-UR-81-1126.

## DISTRIBUTION LIST

1. Strategic Defense Initiative Organization  
Directed Energy Weapons Office  
The Pentagon  
Office of the Secretary of Defense  
Washington, DC 20301-7100  
ATTN: LTC Richard L. Gullickson
2. Commander  
Naval Sea Systems Command  
Department of the Navy  
Washington, DC 20363  
ATTN: NAVSEA/PMS 405 (Capt R.L. Topping)  
CDR William F. Bassett  
Mr. David L. Merritt
3. Air Force Weapons Laboratory (NTYP)  
Kirtland Air Force Base  
Albuquerque, NM 87117  
ATTN: LTC James Head
4. U.S. Army Ballistics Research Laboratory  
Aberdeen Proving Ground, MD 21005  
ATTN: Dr. D. Eccleshall (DRDAR-BLB)
5. Lawrence Livermore Laboratory  
University of California  
Livermore, CA 94550  
ATTN: Dr. R. J. Briggs  
Dr. K. Struve  
Dr. W. Barletta  
Dr. D. Prono  
Dr. Y.P. Chong  
Dr. F.W. Chambers
6. Pulse Sciences Inc.  
14796 Wicks Blvd.  
San Leandro, CA 94577  
ATTN: Dr. S. Putnam
7. Science Applications Inc.  
Security Office  
5 Palo Alto Square, Suite 200  
Palo Alto, CA 94304  
ATTN: Dr. R.R. Johnston  
Dr. Leon Feinstein

8. Naval Surface Weapons Center  
White Oak Laboratory  
Silver Spring, MD 20910  
ATTN: Dr. C. M. Huddleston, R401  
Dr. R. B. Fiorito, R41  
Dr. H. S. Uhm, R41  
Dr. Eugene E. Nolting, H23
9. C.S. Draper Laboratories  
555 Technology Square  
Cambridge, MA 02139  
ATTN: Mr. E. Olsson
10. Office of Naval Research  
Department of the Navy  
Arlington, VA 22217  
ATTN: Dr. W. J. Condell (Code 421)
11. Avco Everett Research Laboratory  
2385 Revere Beach Pkwy.  
Everett, MA 02149  
ATTN: Dr. Dennis Reilly
12. Defense Technical Information Center  
Cameron Station  
5010 Duke Street  
Alexandria, Virginia 22314 (2 copies)
13. Naval Research Laboratory  
Washington, D. C. 20375  
ATTN: T. Coffey - Code 1001  
M. Lampe - Code 4792  
M. Friedman - Code 4700.1  
J. R. Greig - Code 4763 (50 copies)  
I. M. Vitkovitsky - Code 4701  
W. R. Ellis - Code 4000  
S. Ossakow, Supt. - 4700 (26 copies)  
Library - Code 2628 (20 copies)  
A. Ali - Code 4700.1T  
D. Book - Code 4040  
J. Boris - Code 4040  
A. Robson - Code 4760  
M. Picone - Code 4040  
M. Raleigh - Code 4763  
R. Pechacek - Code 4763  
D.P. Murphy - Code 4763  
R.F. Fernsler - Code 4790  
J. D. Sethian - Code 4762  
K. A. Gerber - Code 4762  
G. Joyce - Code 4790  
D. Colombant - Code 4790  
B. Hui - Code 4790  
R. Hubbard - Code 4790  
Y.Y. Lau - Code 4790  
Code 1220 - (1 copy)

14. Defense Advanced Research Projects Agency  
Directed Energy Office  
1400 Wilson Blvd.  
Arlington, VA 22209  
ATTN: Dr. Shen Shey
15. Mission Research Corp.  
1720 Randolph Road, S.E.  
Albuquerque, NM 87106  
ATTN: Dr. Brendan Godfrey  
Dr. J.R. Clifford  
Dr. R. Adler  
Dr. G. Kiuttu
16. McDonnell Douglas Research Laboratories  
Dept. 223, Bldg. 33, Level 45  
Box 516  
St. Louis, MO 63166  
ATTN: Dr. J.C. Leader  
Dr. Evan A. Rose
17. Cornell University  
Ithaca, NY 14853  
ATTN: Prof. David Hammer
18. Sandia National Laboratories  
Albuquerque, NM 87135  
ATTN: Dr. Bruce Miller, 1270  
Dr. Carl Ekdahl  
Dr. M. Mazarakis  
Dr. C. Frost
19. AFOSR/NP  
Bolling Air Force Base, Bldg. 410  
Washington, DC 20331  
ATTN: Capt. H. Pugh
20. University of Michigan  
Department of Nuclear Engineering  
Ann Arbor, MI 48109  
ATTN: Prof. Terry Kammash  
Prof. Ronald M. Gilganbach
21. SRI International  
333 Ravenswood Avenue  
Menlo Park, CA 94025  
ATTN: Dr. D. Eckstrom
22. Los Alamos National Laboratory  
Los Alamos, NM 87545  
ATTN: Dr. R. Carlso  
Dr. S. Czuchlewski

Director of Research  
U.S. Naval Academy  
Annapolis, MD 21402  
(2 copies)